


Showerlay tray fitted to timber floor

(not to scale and prior to tiling)

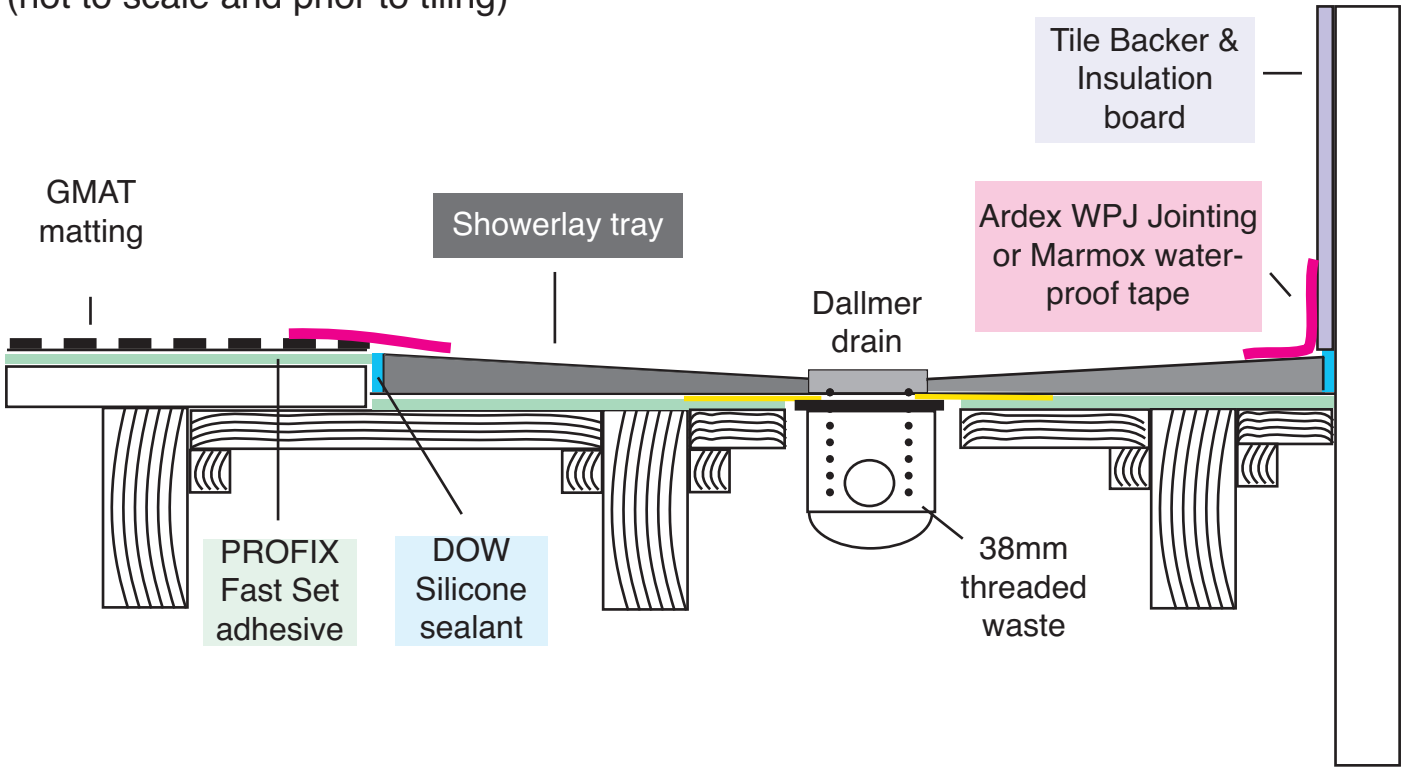

Showerlay tray fitted to screeded floor

(not to scale and prior to tiling)

