



1 Decide where the Showerlay is to go, then mark out the position of the drain hole.



2 Draw a larger circle around the hole with a diameter of between 130mm to 150mm and cut this out using a saw.




3 Twist the drain to adjust the angle of the exit pipe if necessary to achieve the most suitable gradient.



4 Solvent weld the drain to the BS40mm pipe so it is positioned centrally in the hole.



5 Ensure that the floor is level and clean. Using a cement-based flexible tile adhesive, stick the Showerlay to the floor and position the drain tray into position.

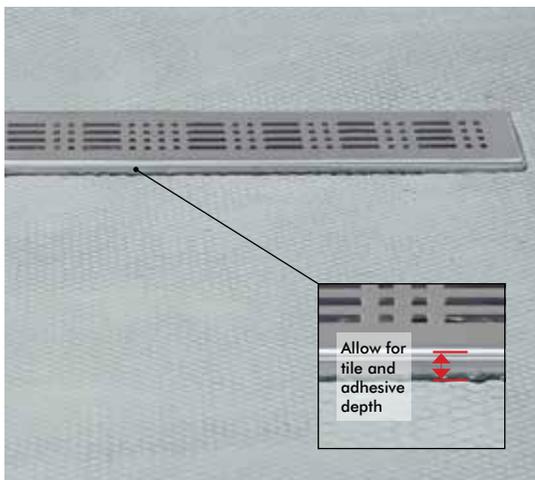

6 The grate needs to be flush with the tiled surface (tile + adhesive). Raise the whole drainage channel using the 2mm and 4mm self-adhesive spacers.



7 Stick the four 4mm self-adhesive pads to the metal base of the Showerlay.



8 If the height needs to be increased further, additional 2mm thick spacers can be stuck on top of the other spacers



9 Screw the flange ring through the Showerlay into the drain below. Hand-tighten using the red "key". No sealants should be used.



10 Showerlay-Linear are 40mm thick. The rest of the floor can be raised to this height using Multiboard 40mm.



11 Waterproof all the joints using waterproof tape and waterproof corners then fit the decorative grate, having first inserted the hair trap.

Installing Standard Showerlay lowered to joist level



A Decide where the Showerlay is to go, draw around it and cut the floor section out using a jigsaw.



B Make support shelves with the cut up flooring and battens fixed to the side of the joists.



C Ensure that this is flat, secure and will support the entire Showerlay.



D Install the Showerlay as detailed above, which will result in the Showerlay being level with the floor.