

marmox showerlay

Floor level shower base
Standard


Showerlay - wooden floor

Marmox products are ideal for shower and wetroom applications and with the Marmox Showerlay it's easy work to create a stylish sloping floor. A Showerlay is a floor level panel that can be cut to fit the shower area or to produce an irregular shower base. Place directly onto a concrete or wooden floor or lower into the floor by placing support between the floor joists. By using the Showerlay with Multiboard you can create a fully waterproof shower area or steam room with total ease and reassurance.

Horizontal drain has a flow rate of 30 litres/min with a BS 40mm outlet pipe. Vertical drain has a 48 litres/min flow rate with BS 50mm outlet pipe (40mm adaptor available for the vertical drain).




- fully waterproof
- lightweight to handle
- reinforced for extra support
- ready for tiling
- centre or offset drainage
- can be can down to size

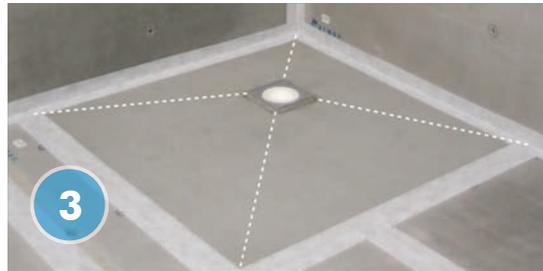

Boarding lowered between joists

Standard floor on joists

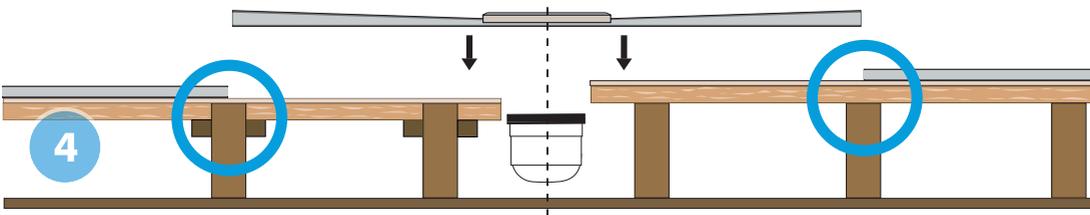

marmox showerlay

Floor level shower base
Standard



Showerlay - wooden floor

Centre drain

size (mm)	perimeter (mm)	weight (kg)
800 x 800	20	3.50
900 x 900	20	4.20
1000 x 1000	20	5.00
1200 x 760	20	5.00
1200 x 900	20	5.20
1200 x 1200	20	7.00
1500 x 1500	24	10.50

Offset drain

size (mm)	perimeter (mm)	weight (kg)
1000 x 1000	20	5.00
1300 x 800	20	5.20
1500 x 800	24	6.00
1200 x 760	20	5.00
1200 x 900	20	5.20
1200 x 1200	20	7.00
1850 x 900	24	8.50

Preparation

Make sure floor is dust and dirt free.

Fixing





- Position the Showerlay on the wooden floor and draw around the drain hole, marking the floor. The Showerlay can be laid onto the existing floor or lowered to joist level. If lowering then make sure to place support boarding between and flush with the top of the joists (minimum 18mm wood). The Showerlay needs to be fully supported. Cut out a key hole shape 10mm larger than the circumference of the drain and big enough to allow the Dallmer drain knuckle to move upwards freely.
- Position in the drain and the pipework making sure everything lines up and that the floor is level.
- Place the black rubber ring on top of the drain.
- Stick the Showerlay to the floor with a full bed of cement based flexible tile adhesive.
- Check again by using a spirit level on all edges of the Showerlay.
- Screw the plastic ring through into the Dallmer drain, using the tool provided for a very tight seal.
- Place the hair trap and funnel into the drain and then the grill on top.

Joints

Be sure to tape all the edges and joints with Marmox Self Adhesive Waterproof tape and all corners with Marmox Waterproof Corners.

Final touch

Now coat the surrounding walls and floor with Marmox Multiboard and tiling can begin.

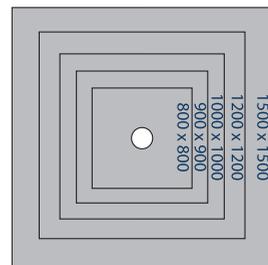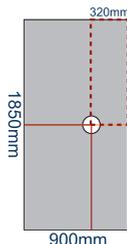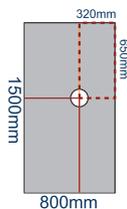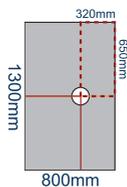

These 2 sizes are also available with centre drain position

